



BREAKAWAY

Tag Installation

Step 1

Clean the surface.




Step 2

Peel back the adhesive cover of the tag.



Step 3

Stick the tag on the inside of your windshield or on your headlamp and smooth out air pockets.

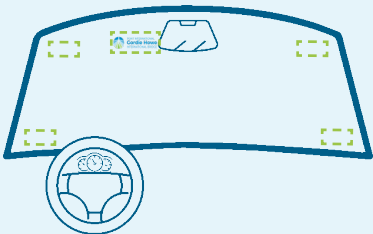

Windshield tag location options
(4" away from window edge)



Headlamp tag location
(2" from metal edge)

Step 4

Activate your tag online through your Breakaway account.



**Scan to view
instructional
video**

Questions?

customerservice@breakawaypass.com
Phone: 1-855-200-3299